

## INSTRUCTIONS MANUAL

### FEATURES

- Time Telling Mode (Hours, Minutes, Seconds, Date and Day of the Week)
- 24 Hour Alarm
- Hourly Chime: One 'Beep' sound every full Hour
- Chronograph Mode: Hours, Minutes, Seconds, and 1/100 of a second with Lap Operation
- Countdown Timer
- Second Time Zone
- 12/24 Hour (Military Time)
- Water Resistant as indicated on the watch
- INSTALITE - Electro Luminescent Display

### EL LIGHT FEATURE

1. Press 'D' in any mode to illuminate the watch face. The backlight will remain lit for 2 to 3 seconds.

**NOTE:** EXCESSIVE USE OF LIGHT WILL SHORTEN BATTERY LIFE.

### SELECTING FEATURES

1. Time Telling Mode displays Hours, Minutes, Seconds, Date, and Day of the Week.
2. From Time Telling Mode, press 'B' once. Alarm Mode appears. Press 'B' three times to return to Time Telling Mode.
3. From Time Telling Mode, press 'B' twice. Chronograph Mode appears. Press 'B' two times to return to Time Telling Mode.
4. From Time Telling Mode, press 'B' three times. Countdown Timer Mode appears. Press 'B' once to return to Time Telling Mode.
5. From Time Telling Mode, press 'C' once. Dual Time Mode appears. Press 'C' again to return to Time Telling Mode.

### SETTING THE TIME AND CALENDAR

#### Analog

1. Pull the Crown, 'E', out. The second hand stops. Rotate the Crown in either direction until the desired time is obtained. Push the Crown back in to re-engage time keeping.

#### Digital

1. From Time Telling Mode, press and hold 'A'. Seconds flash. Press 'C' to zero out the Seconds.

**NOTE:** Zeroing out 30 or more seconds automatically adds one minute to time.

2. Press 'B'. Minutes flash. Press 'C' to advance the Minutes.

**NOTE:** Pressing and holding 'C' will advance digits rapidly.

3. Press 'B'. Hours flash. Press 'C' to advance the Hour.

**NOTE:** When 12 Hour Format is selected, 'A' indicates 'a.m.' times, 'P' indicates 'p.m.' times.

4. Press 'B'. Military Time flashes. Press 'C' to select either 12 Hour Time or 24 Hour (Military) Time.

5. Press 'B'. Months flash. Press 'C' to advance the Month.

6. Press 'B'. The Date flashes. Press 'C' to advance the Date.

7. Press 'B'. The Year flashes. Press 'C' to advance the Year.


8. Press 'B' to end sequence and return to Time Telling Mode

### STOPWATCH

1. From Time Telling Mode, press 'B' twice to enter the Stopwatch Mode.
2. Press 'C' to start timing.
3. Press 'C' again to stop timing.
4. Press 'A' to reset to zero.
5. Press 'B' to return to Time Telling Mode.

### SPLIT TIME

1. While in Stopwatch Mode, press 'C' to start timing.
2. Press 'A' to measure and display Split Times.
3. Press 'C' to stop timing at the end of the event.
4. Press 'A' to reveal the final Split Time.
5. Press 'A' again to reset to zero.
6. Press 'B' to return to Time Telling Mode.

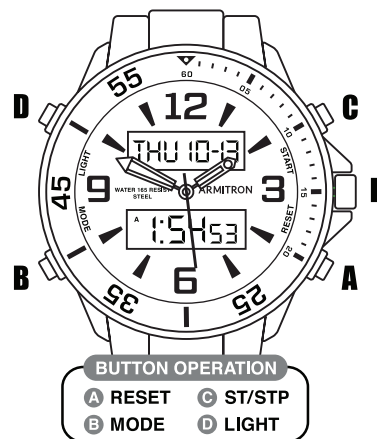

### SETTING THE 24 HOUR ALARM

1. From Time Telling Mode, press 'B' once to enter the Alarm Mode.
  2. Press and hold 'A'. Alarm Hours flash. Press 'C' to advance the Alarm Hour.
  3. Press 'B'. Alarm Minutes flash. Press 'C' to advance the Alarm Minute.
- NOTE:** Pressing and holding 'C' will advance digits rapidly.
4. Press 'A' to end set sequence.
  5. Press 'B' to return to Time Telling Mode.

### ACTIVATING ALARM + HOURLY CHIME

1. While in Alarm Mode, press 'C' to deactivate the Alarm. The Alarm Symbol appears to indicate the Alarm will sound at the preset Alarm Time for about 20 seconds or until 'A', 'B' or 'C' is pressed.
2. Press 'C' again to activate the Hourly Chime. The Hourly Chime Symbol appears to indicate the Hourly Chime will sound every hour on the hour.
3. Press 'C' again to activate both the Alarm and the Hourly Chime.
4. Press 'C' again to deactivate the Alarm and the Hourly Chime.
5. Press 'B' to return to Time Telling Mode.

### DUAL TIME ZONE

1. From Time Telling Mode, press 'C' once to enter the Second Time Zone Mode.
  2. Press and hold 'A'. Minutes flash. Press 'C' to advance the Minutes.
  3. Press 'B'. Hours flash. Press 'C' to advance the Hours.
  4. Press 'A' to end set sequence.
  5. Press 'C' to return to Time Telling Mode.
- NOTE:** The Second Time Zone (Dual Time) Clock may be used to keep track of a foreign time.

### COUNTDOWN TIMER

1. From Time Telling Mode, press 'B' three times to enter the Countdown Timer Mode.
  2. Press and hold 'A'. Hours flash. Press 'C' to adjust Hours.
  3. Press 'B'. Minutes flash. Press 'C' to adjust the Minutes.
  4. Press 'A' to end set sequence.
  5. Press 'C' to start the Countdown Timer.
  6. If desired, press 'C' again to stop the Countdown Timer. Press 'C' again to resume the Countdown Timer.
- NOTE:** The Countdown timing will continued in any mode until 'C' is pressed. When the Timer has expired, the alarm will sound for about 10 seconds or until 'B' or 'C' is pressed. The Timer will automatically reset to the preset Countdown Time after the alarm stops.
7. If desired, press 'B' to reset the Countdown time to the preset Countdown time. Press 'C' again to restart the Countdown Timer.
  8. Press 'C' to stop the Timer.
  9. Press 'B' to return to Time Telling Mode.

## INSTRUCTIONS MANUAL

### CHANGING THE BATTERY

Change the battery when the watch becomes slow, the readout darkens or does not appear, or the backlight fails. Before removing the old battery, be sure to denote its polarity so that the new battery is installed in exactly the same way. Replace with the same kind or equivalent only. This watch contains precise electronic components and should only be opened by a qualified watch technician. However, it is not necessary to return your watch to the manufacturer for battery replacement. It is recommended that you bring your timepiece to a local jeweler.

### WATER RESISTANCE

This is a **WATER RESISTANT** watch. Do not operate push buttons below the surface of the water. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

### USE OUR NATIONWIDE SERVICE CENTERS. YOU CANNOT RETURN WATCH FOR SERVICE WHERE IT WAS PURCHASED.

If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, Armitron Adventure approved Service Centers are available in your area. These repair facilities use Armitron Adventure parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt.

### RETURN YOUR WATCH FOR SERVICING

Please call **(718) 482-4195** for a listing of all approved and authorized service centers and locations, or visit our website at:

**WWW.ARMITRON.COM**

YOUR WATCH SHOULD NOT BE RETURNED TO THE PLACE OF PURCHASE. Carefully pack your watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to the nearest approved authorized service station. Because of possible loss, we recommend that you insure the watch, return receipt requested, when using the mail. If you do not receive a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watch band or any other article of personal value in your shipment.